



TRANSITION**INSTALLATION**

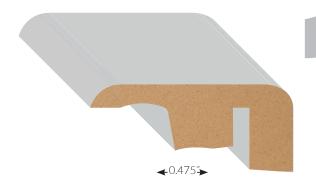





Install the flooring leaving a 1-1/4" gap between the two floors for the end cap installation.


LAMINATE SQUARE NOSE

Used to fill the gap between the floor and carpet, hearths or against sliding doors.

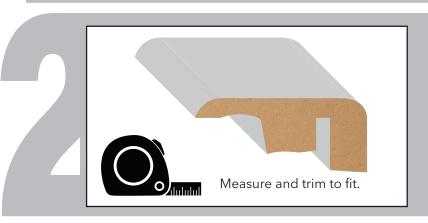

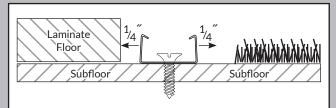

Center the track between the flooring with 1/4" spacing between the track and floor plank and screw to the subfloor using included screws.

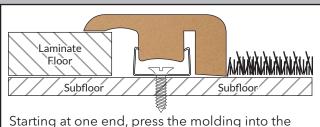

Starting at one end, press the molding into the track inching along the length of the molding. *It will NOT snap in all at once.* You may also use a rubber mallet.