




# ZETA

Vanity Accessories

“Robe Hook”

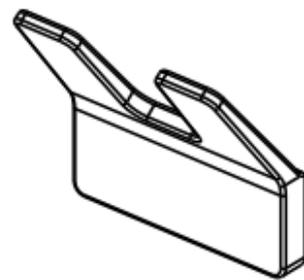

PEARLSINKS.COM

## INTRODUCTION


Thank you for purchasing an authentic Pearl Sinks® vanity accessory. The fixture you have purchased is crafted out of the highest quality chrome-plated brass. Each and every fixture is carefully inspected by hand before leaving the production line.

Please read the instructions carefully to prevent any malfunction and damages.

## CONTENTS

This fixture kit contains the following:

x1

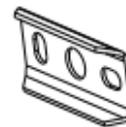

Mounting Plates

x2



Plastic Anchors

x2



Wood/Anchor Screws

x1



Hex Wrench

## TOOLS




Philips Screwdriver



Power Drill



1/4" Drill Bit

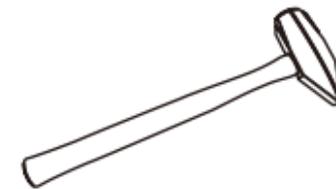

Hammer




Masking Tape



Level

## INSTALLATION


- 1 Position the template where you would like to mount the fixture.
- 2 Level the template, then attach it to the wall with masking tape.
- 3 Drill two  $1/4$ " holes on each corresponding mounting plate location.
- 4 Remove the template from the wall.
- 5 Insert the plastic anchors into the hole until it is flush with the wall.

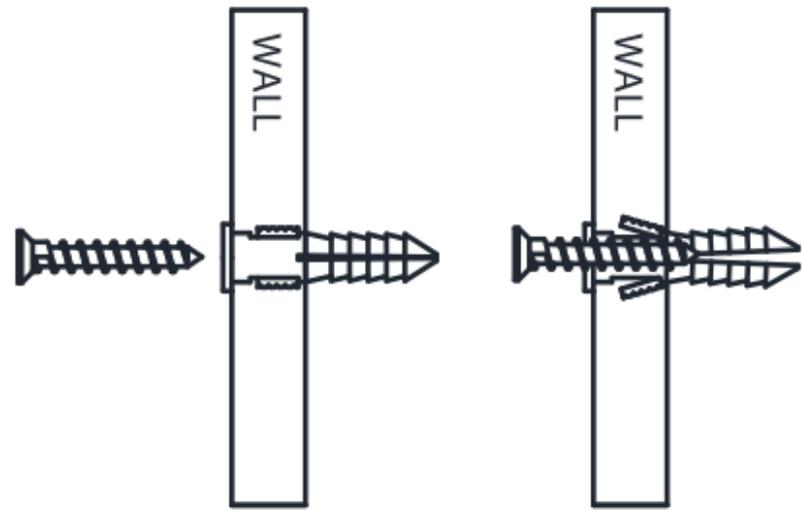

- 6 Install mounting plates onto the wall using the screws provided.
- 7 Install the the fixture and tighten the hex screw.

## TEMPLATE

ACTUAL SIZE

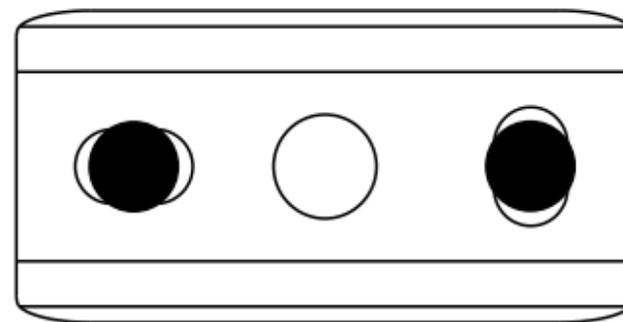

**FACE THIS SIDE TOWARDS YOU**